


Worm Over


Input Flange

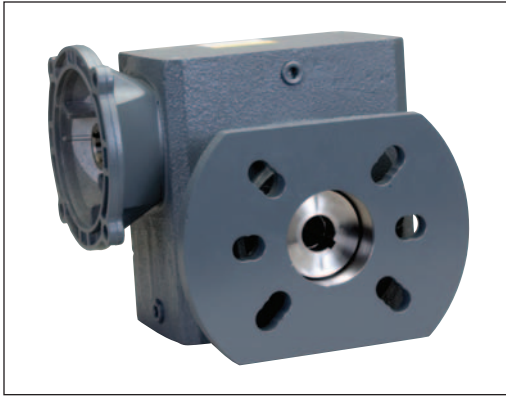

Output Flange

**M – CFA Hollow Output
Input Left**


Input Flange

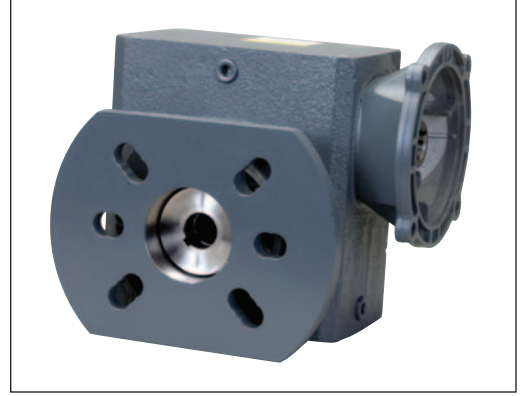

**N – CFA Hollow Output
Input Right**

Worm Under


Output Flange

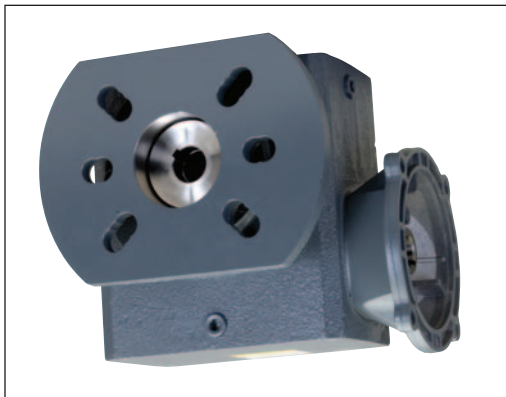

Input Flange

M – CFA Hollow Output

Output Flange

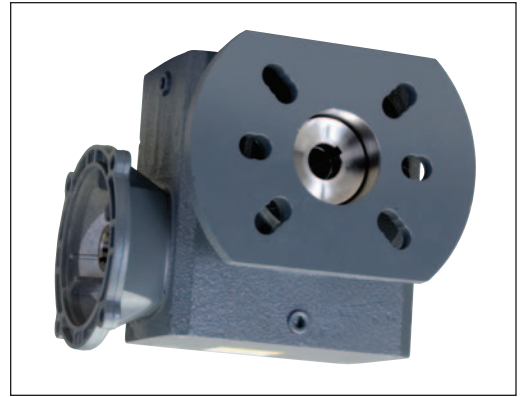

N – CFA Hollow Output